## TECHNICAL SPECIFICATIONS AND INSTRUCTIONS FOR USE

SANTON X-TYPE SWITCH: X100.25R4-AZ



Switch disconnector for solar application according to IEC 60947-1&3



Contact	sche	me	osit	ion	s
Marking Syr	nbol	Marking			4
-/	/_				
-/	/_				
	/_				
	/_				
-/	<u> </u>				
-/	/_				
	/_	+2	Х		Х
	/_	+2	Χ		Χ
-2 -/	/_	-2	Х		X
-1 —_	/_	-1	Χ		Χ
	/-	+1	Х		Х
	/_	+1	Χ		Х
	Marking Sym	Marking Symbol	 Marking Symbol Marking 1	Marking         Symbol         Marking         1         2           -/	Marking Symbol Marking         1         2         3


Contats are made in "X" marked position.

Symbols for interconnection: [ ]


THE RESERVE OF THE PERSON NAMED IN COLUMN	Symbols for interconnection:			
Symbol	Unit			
Ue	1000	V dc		
le	25	A dc		
Ue		V dc		
le		A dc		
ing IP65 [R] ter	minals access from	bottom side		
	4			
	DC-21B			
actuator standard black [A],				
OFF at 3 hr, ON at 6 hr, OFF at 9 hr, ON at 12 h				
Uimp	8	kV		
Ui	1000	V		
lu	25	Α		
lcw	750	Α		
lcm	1,4	kA		
	6	kA		
		kA		
	6,0	W		
independent i				
minimum required dimensions of enclosures I x w x h* 124 x 47 x 95				
	6			
	1,5 1,7	Nm		
	2,0 2,5	Nm		
	4	mm²		
ambient temperature allowed between - 25 and + 70		°C		
	- 40 and + 80	°C		
	90	%		
	2			
	IP20			
	IP65			
Ue	0	V AC		
le	0	A AC		
	0			
auxiliary contact, nominal current 16A at 250 V, AC15 No auxiliary contact				
•	284	g		
	Symbol Ue Ie Ue Ie Ie Ing IP65 [R] ter  standard blac OFF at 3 hr, O Uimp Ui Iu Icw Icm  independent	Symbol   Unit		






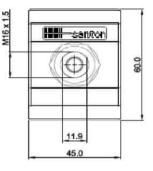

H is the number of layers in the switch

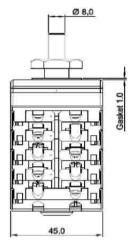

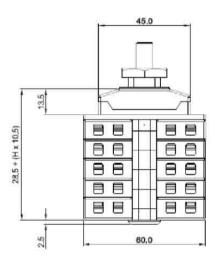

## Mounting instructions

In the application all ratings have to be respected. When building the switch in an enclosure, the space envelope must be respected. The terminals can take flexible wires up to 6 mm<sup>2</sup> and fork shoes for wires up to 10 mm<sup>2</sup> (type 3547C from Vogt). After mounting, the wiring must be checked and the switch must operate smoothly.

## Maintenance

The X type switches are designed for a very long life but it is advised to do some simple yearly maintenance.

- Check the installation for signs of overload or overheating. The terminals may not exceed the limit of  $85^{\circ}\text{C}$  under full load.
- By operating the switch a few times (5x) the contacts will clean themselves and the switch will have a longer life.

Dimensions, specifications and data shown could be subject to change without notice.

JD Auspice Co., Ltd. TEL: 886-2-2595-9780 FAX: 886-2-2595-9412 service@jdauspice.com www.jdauspice.com

Superior Switch Solutions