THE NEW SANTON X-TYPE SWITCH

12

11

10 9

8

7

6

5 D

4

3

2

В

TECHNICAL SPECIFICATIONS AND INSTRUCTIONS FOR USE

SANTON X-TYPE SWITCH:

X60.25PKS1E-(A)-25.25.2-03MX

Positions

Contact scheme

-/-

/

/

/

-/-

/

-/-

/

-/-

Empty

Marking Symbol Marking 1 2 3 4

с х

А

1

Х


Х

ST.	


Switch disconnector for solar application according to UL 508, CSA C22.2 No. 0 – M91, - CSA C22.2 No. 14 – 05


Technical data nominal voltage nominal current method of mounting number of poles DC single pole switching utilization category actuator method of operation positions	1 Contacts are ma Symbols for con Symbol U I Photovoltaic dia without a knob, independent m	single h sconnect sw soutable fo anual opera	600 25 nole moun vitch r standard	Uni V A ting IP	it 265 [P]	
nominal voltage nominal current method of mounting number of poles DC single pole switching utilization category actuator method of operation positions	Symbols for com Symbol U I Photovoltaic dis without a knob	single h sconnect sw soutable fo anual opera	600 25 nole moun 1 vitch r standard	Uni V A ting IP	it 265 [P]	
nominal voltage nominal current method of mounting number of poles DC single pole switching utilization category actuator method of operation positions	Symbol U I Photovoltaic dis without a knob,	single h sconnect sw , suitable fo anual opera	600 25 nole moun 1 vitch r standard	Uni V A ting IP	it 265 [P]	
nominal voltage nominal current method of mounting number of poles DC single pole switching utilization category actuator method of operation positions	U I Photovoltaic dis without a knob,	sconnect sw , suitable fo anual opera	25 nole moun 1 vitch r standard	V A ting IP	965 [P]	
nominal current method of mounting number of poles DC single pole switching utilization category actuator method of operation positions	l Photovoltaic dis without a knob,	sconnect sw , suitable fo anual opera	25 nole moun 1 vitch r standard	A ting IP		
method of mounting number of poles DC single pole switching utilization category actuator method of operation positions	Photovoltaic dis without a knob	sconnect sw , suitable fo anual opera	nole moun 1 vitch r standard	ting IP		
number of poles DC single pole switching utilization category actuator method of operation positions	without a knob,	sconnect sw , suitable fo anual opera	1 vitch r standard			
utilization category actuator method of operation positions	without a knob,	, suitable fo anual opera	vitch r standard	black	knob	
actuator method of operation positions	without a knob,	, suitable fo anual opera	r standard	black	knob	
method of operation positions		anual opera		DIACK	KHOD	
positions	independent m		ition			
F		UF	independent manual operation OFF at 12 hr, ON at 3 hr [E]			
		0.1			3 nr [E]	
rated impulse withstand voltage			8	kV		
insulation voltage			600	V		
rated thermal current uninterrupted duty			25	A		
rated short-time withstand current (1s)			750	A		
suitable for use on a circuit capable of delivery not more than 5.00	0 rms symmetrica	I				
Amperes, 600 Vdc max, when protected by class H fuses:			40	Α	max.	
max power dissipation			4,0	W		
minimum required dimensions of enclosures I x w x h*		124 x 4	7 x 80.5	mn	1	
* see the drawing for the hight of the switch. The number of layers	s is H		5			
terminal screws M4 need a tightening torque, min max.		1,5	1,7	Nm	I	
		13	15	Lb.	in	
wire size, "Copper Wire Only", minimum required fine wire cross-s	ection		4	mn	1 ²	
			10	AW	/G	
tightening torque panel mounting nut, min max.		2	2,5	Nm	i	
		18	22	Lb.	In	
ambient temperature allowed between		- 5 a	and + 40	°C		
storage temperature allowed between		- 40 a	and + 80	°C		
maximum relative humidity, without condensation at 20°C			90	%		
watertight gland, class						
nominal voltage AC	U		250	V	AC	
nominal current AC	I		25	Α	AC	
number of poles AC			2			
auxiliary contact, nominal current 16A at 250 V, AC15	No auxiliary cor	ntact				
weight	,		254	g		
accessoires: 0						

HIIIIII santon

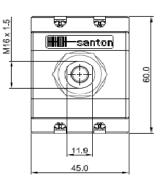

H is the number of layers in the switch

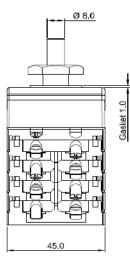

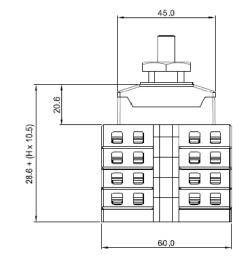

Mounting instructions

In the application all ratings have to be respected. When building the switch in an enclosure, the space envelope must be respected. The terminals can take flexible wires up to 6 mm² and with fork shoes for wires up to 10 mm² (type 3547C from Vogt) After mounting the wiring must be checked and the switch must operate smoothly.

Maintenance

The X type switches are designed for a very long life but they need some simple yearly maintenance.

- Check the installation for signes of overload or overheating. The terminals may not exceed the limit of 85°C under full load.

- By operating the switch a few times (5x) the contacts will clean themselves and the switch will have a longer life.

Dimensions, specifications and data shown could be subject to change without notice.