# THE NEW SANTON X-TYPE SWITCH

## TECHNICAL SPECIFICATIONS AND INSTRUCTIONS FOR USE


SANTON X-TYPE SWITCH:

X100.25R4-AZ

Switch disconnector for solar application according to IEC 60947-1&3



13	<del>_</del>	-/-	+1	~	
	Contats are	Contats are made in "X" marked position.			
	Symbols for interconnection:				
Technical data	Symbol	Ur	it		
nominal voltage (DC poles)	Ue		1000	V dc	
nominal current (DC poles)	le		25	A dc	
nominal voltage (second rating DC poles, if requested)	Ue			V dc	
nominal current (second rating DC poles, if requested)	le			A dc	
method of mounting reverse single hole mou	nting IP65 [R] to	erminals ac	cess from	oottom si	
number of DC poles			4		
utilization category DC			DC-21B		
actuator	standard bla	ack [A],			
positions	OFF at 3 hr,	ON at 6 hr,	OFF at 9 h	r, ON at 1	
rated impulse withstand voltage	Uimp		8	kV	
insulation voltage	Ui		1000	V	
rated thermal current uninterrupted duty	lu		25	А	
rated short-time withstand current (1s)	lcw		750	А	
rated short-circuit making capacity	lcm		1,4	kA	
rated conditional short-circuit current			6	kA	
max. cut-off current				kA	
max power dissipation			6,0	W	
method of operation	independen	t manual o	peration		
minimum required dimensions of enclosures l x w x h*		124 >	47 x 95 x	mm	
* see the drawing for the height of the switch. The number of layers H is:			6		
terminal screws M4 need a tightening torque, min max.		1,5	1,7	Nm	
tightening torque screw in the standard black knob, min max.		2,0	2,5	Nm	
minimum required fine wire cross-section: IEC60947-1, table 9			4	mm <sup>2</sup>	
ambient temperature allowed between		- 25	and + 70	°C	
storage temperature allowed between		- 40	and + 80	°C	
maximum relative humidity, without condensation at 20°C			90	%	
pollution degree			2		
IP rating terminals			IP20		
IP rating gland of the shaft in case of single hole panel mounting			IP65		
nominal voltage (AC poles)	Ue		0	V AC	
nominal current (AC poles)	le		0	A AC	
number of DC poles			0		
auxiliary contact, nominal current 16A at 250 V, AC15	No auxiliary	contact			
weight			284	g	
accessories:					
		400000	b or		
Superior Switch Solutions		- minute	₩ sa	1100	

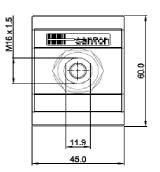

2

Х

Х

Х

Х

Х

Х

Х

Х

Х

Х

Х

Х

Positions

Contact scheme

\_/\_

-/-

-/-

\_/\_

-/-

-/--/-

\_\_\_

-/-

-/-

\_/\_

\_/\_

12

11

10

9

8

5

3

2

1

-2

-1

Marking Symbol Marking 1 2 3 4

+2

+2


-2


-1

+1

+1

H is the number of layers in the switch

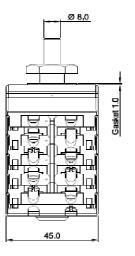

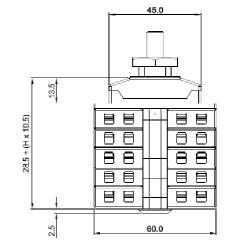

#### Mounting instructions

In the application all ratings have to be respected. When building the switch in an enclosure, the space envelope must be respected. The terminals can take flexible wires up to 6 mm<sup>2</sup> and fork shoes for wires up to 10 mm<sup>2</sup> (type 3547C from Vogt). After mounting, the wiring must be checked and the switch must operate smoothly.

### Maintenance

The X type switches are designed for a very long life but it is advised to do some simple yearly maintenance. - Check the installation for signs of overload or overheating. The terminals may not exceed the limit of 85°C under full load.

- By operating the switch a few times (5x) the contacts will clean themselves and the switch will have a longer life.

Dimensions, specifications and data shown could be subject to change without notice.

#### perior Switch Solutions

15-7-2010 10:4