


## TECHNICAL SPECIFICATIONS AND INSTRUCTIONS FOR USE

SANTON X-TYPE SWITCH: X60.25PKS1E-(A)-25.25.2-03MX



Switch disconnecter for solar application according to UL 508, CSA C22.2 No. 0 – M91, - CSA C22.2 No. 14 – 05

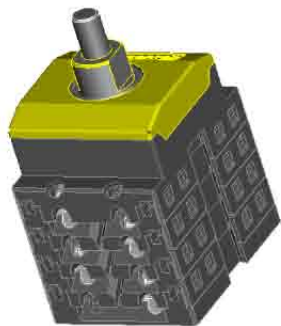


Positions	Contact scheme		1	2	3	4
	Marking	Symbol				
12		— / —				
11		— / —				
10		— / —				
9		— / —				
8		— / —				
7		— / —				
6		— / —				
5	D	— / —	C	X		
4	B	— / —	A	X		
3	Empty					
2		— / —	1	X		
1		— / —	1	X		



Contacts are made in "X" marked position.

Symbols for connections between contacts: [ ]

Technical data	Symbol	Unit
nominal voltage	U	600 V
nominal current	I	25 A
method of mounting	single hole mounting IP65 [P]	
number of poles	DC single pole switching	1
utilization category	Photovoltaic disconnect switch	
actuator	without a knob, suitable for standard black knob	
method of operation	independent manual operation	
positions	OFF at 12 hr, ON at 3 hr [E]	
rated impulse withstand voltage	8	kV
insulation voltage	600	V
rated thermal current uninterrupted duty	25	A
rated short-time withstand current (1s)	750	A
suitable for use on a circuit capable of delivery not more than 5.000 rms symmetrical Amperes, 600 Vdc max, when protected by class H fuses:		
max power dissipation	4,0	W
minimum required dimensions of enclosures l x w x h*	124 x 47 x 80.5	mm
* see the drawing for the height of the switch. The number of layers is	H	5
terminal screws M4 need a tightening torque, min. - max.	1,5 1,7	Nm
	13 15	Lb.In
wire size, "Copper Wire Only", minimum required fine wire cross-section	4	mm <sup>2</sup>
	10	AWG
tightening torque panel mounting nut, min. - max.	2 2,5	Nm
	18 22	Lb.In
ambient temperature allowed between	- 5 and + 40	°C
storage temperature allowed between	- 40 and + 80	°C
maximum relative humidity, without condensation at 20°C	90	%
watertight gland, class		
nominal voltage AC	U	250 V AC
nominal current AC	I	25 A AC
number of poles AC		2
auxiliary contact, nominal current 16A at 250 V, AC15	No auxiliary contact	
weight		254 g
accessoires:	0	

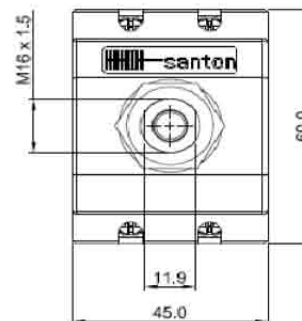

H is the number of layers in the switch

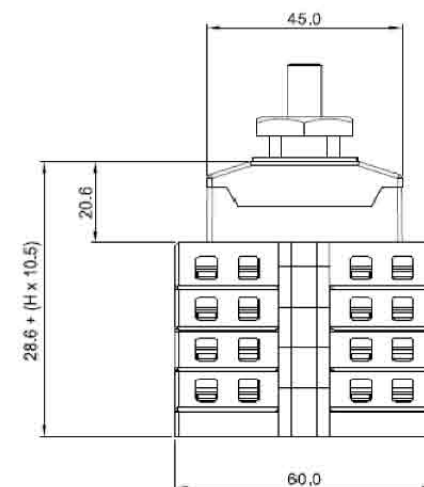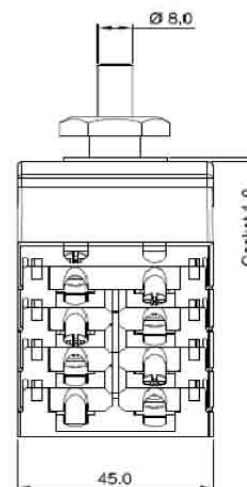

### Mounting instructions

In the application all ratings have to be respected. When building the switch in an enclosure, the space envelope must be respected. The terminals can take flexible wires up to 6 mm<sup>2</sup> and with fork shoes for wires up to 10 mm<sup>2</sup> (type 3547C from Vogt) After mounting the wiring must be checked and the switch must operate smoothly.

### Maintenance

The X type switches are designed for a very long life but they need some simple yearly maintenance.  
 - Check the installation for signs of overload or overheating. The terminals may not exceed the limit of 85°C under full load.  
 - By operating the switch a few times (5x) the contacts will clean themselves and the switch will have a longer life.

Dimensions, specifications and data shown could be subject to change without notice.