## THE NEW SANTON X-TYPE SWITCH

## TECHNICAL SPECIFICATIONS AND INSTRUCTIONS FOR USE


SANTON X-TYPE SWITCH:

X60.25RL2-A

Switch disconnector for solar application according to IEC 60947-1&3



0	1 1 /		~
	Contacts are made in "X" marked position. Symbols for interconnection: [ ]		
nominal voltage (DC poles)	Ue	600	V dc
nominal current (DC poles)	le	25	A dc
nominal voltage (second rating DC poles, if requested)	Ue		V dc
nominal current (second rating DC poles, if requested)	le		A dc
nethod of mounting reverse single hole mounting IP65	[R] terminals acc	ess from bottom s	ide long g
number of DC poles		2	
utilization category DC		DC-21B	
actuator	standard black	< [A],	
positions	OFF at 3 hr, OI	N at 6 hr, OFF at 9	hr, ON at 1
rated impulse withstand voltage	Uimp	8	kV
nsulation voltage	Ui	600	V
rated thermal current uninterrupted duty	lu	25	A
rated short-time withstand current (1s)	lcw	750	A
ated short-circuit making capacity	lcm	1.4	kA
rated conditional short-circuit current		2	kA
nax. cut-off current			kA
max power dissipation		2.0	W
nethod of operation	independent r	nanual operation	
ninimum required dimensions of enclosures I x w x h*	124 x 47 x 53 mm		
* see the drawing for the height of the switch. The number of layers H is:		2	
erminal screws M4 need a tightening torque, min max.		1.5 1.7	Nm
ightening torque panel mounting nut, min max.		2.0 2.5	Nm
ightening torque screw in the standard black knob, min max.		0.5 0.7	Nm
ninimum required fine wire cross-section: IEC60947-1, table 9		4	mm <sup>2</sup>
ambient temperature allowed between		- 5 and + 40	°C
storage temperature allowed between		- 40 and + 80	°C
maximum relative humidity, without condensation at 20°C		90	%
pollution degree		2	
P rating terminals		IP20	
P rating gland of the shaft in case of single hole panel mounting		IP65	
nominal voltage (AC poles)	Ue	0	V AC
nominal current (AC poles)	le	0	A AC
number of DC poles		0	
auxiliary contact, nominal current 16A at 250 V, AC15	No auxiliary co	ontact	
weight		157	g
accessories:			

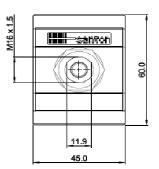

2

Positions

Х

Х

Х

Х

Contact scheme

\_/\_

\_/\_

-/-

-/-

\_/\_

-/--/-

-/--/--/-

-/-

-/-

12 11

10

9

8

3

2 -1


1 +1


Marking Symbol Marking 1 2 3 4

-1

+1

H is the number of layers in the switch

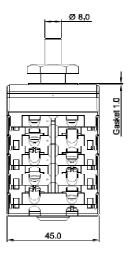

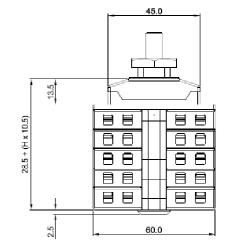

## Mounting instructions

In the application all ratings have to be respected. When building the switch in an enclosure, the space envelope must be respected. The terminals can take flexible wires up to 6 mm<sup>2</sup> and fork shoes for wires up to 10 mm<sup>2</sup> (type 3547C from Vogt). After mounting, the wiring must be checked and the switch must operate smoothly.

## Maintenance

The X type switches are designed for a very long life but it is advised to do some simple yearly maintenance. - Check the installation for signs of overload or overheating. The terminals may not exceed the limit of 85°C under full load.

- By operating the switch a few times (5x) the contacts will clean themselves and the switch will have a longer life.

Dimensions, specifications and data shown could be subject to change without notice.